AKT 821 PRODUCT DESCRIPTION SHEET

PL CZ SK HU BG RO HR SL GB

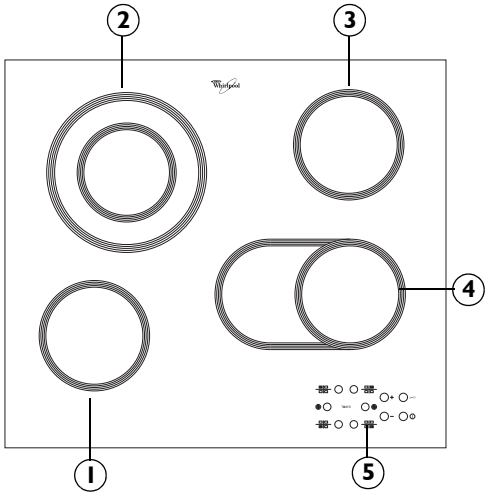

1. Radiant cooking zone Ø 145
2. Radiant dual cooking zone Ø 210
3. Radiant cooking zone Ø 145
4. Radiant dual oval cooking zone
5. Display

Be careful:

To avoid permanently damaging the glass-ceramic top, do not use:

- Pots with bottoms that are not perfectly flat.

- Metal pots with enamelled bottom.

Any aesthetic defects (scratches, surface marks, etc.) must be reported immediately upon installation.

DIMENSIONS OF THE HOB (mm)

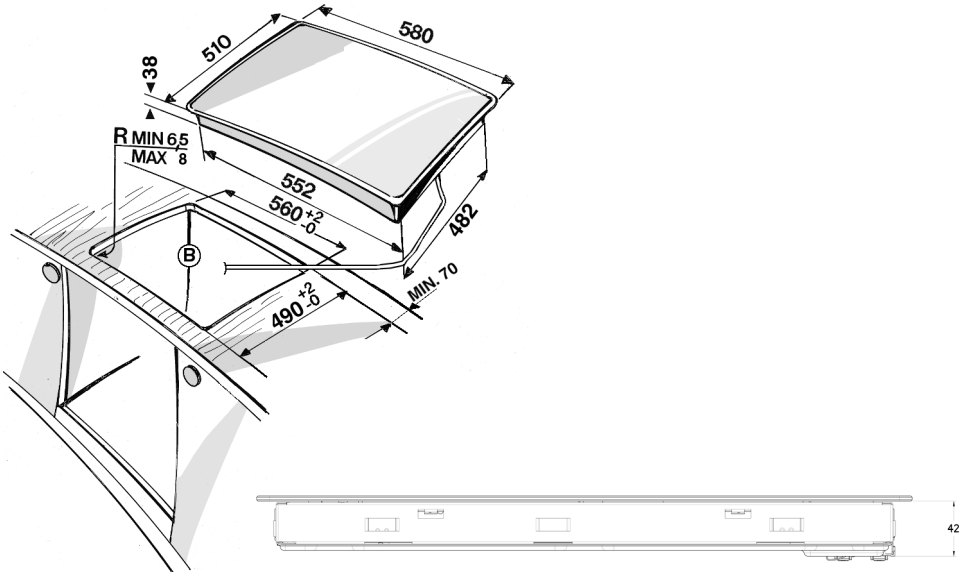

Type PLEAT 230 V ~ /400 V 3 N ~ 50 Hz 6.3 kW

Whirlpool is a registered trademark of Whirlpool USA
© Copyright Whirlpool Europe S.r.l. All rights reserved

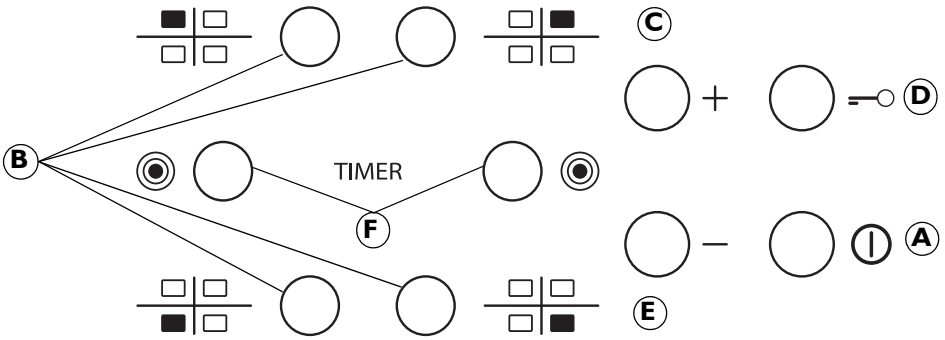

A	On/Off	**D**	Key lock
B	Cooking zone and timer selection	**F**	Multiple zone Activation/Deactivation
C-E	Heat setting increase and decrease		

Upon first installation, the control panel performs a functional test for about 1 second, after which it automatically switches to the "Key lock" function.

To deactivate the function, press and hold button **"D"**; an acoustic signal will sound and the corresponding led will turn off.

NOTE: If a reset occurs, repeat the procedure described above.

To switch the hob on, keep button **"A"** pressed for approx. 2 seconds. The 4 cooking zone displays show **"0"**. If within 20 seconds none of the cooking zones is activated, the hob switches off automatically as a safety precaution.

Press one of the buttons **"B"** corresponding to the cooking zone you intend to use.

Select the heat setting required with buttons **"E"** or **"C"**. The other selectable cooking settings go from 1 to 9. Press buttons +/- at the same time to cancel all settings.

Pressing button "+" when level 9 is reached, the "Booster" function is activated and the letter **"A"** appears on the display.

IMPORTANT: the control is deactivated 10 seconds after the heat setting has been selected. To change the heat setting, first press the selection button **"B"** again, then proceed to change the setting, using buttons **"E"** or **"C"**.

MULTIPLE ZONE: After selecting the desired zone and setting the level (as described in the previous section) press **"F"**: an indicator above the button turns on, activating the additional zone. The multiple zone can only be used if:

1) The cooking zone is provided with multiple zone;

2) The power level selected is greater than 0.

To deactivate the multiple zone, press button **"B"** of the desired zone, then press **"F"** again.

To set the Timer function, select the desired cooking zone and power setting then press the cooking zone key again and a luminous dot will appear on the display of the timer-controlled cooking zone.

TIMER The indication **"00"** blinks on the 2 displays. Press buttons **"C"** or **"E"** to set the time from 1 to 99.

IMPORTANT: after 10 seconds the timer displays will show the power setting of the other cooking zones. To view the remaining cooking time, press the timer-controlled cooking zone key twice.

The **KEY LOCK** function is switched on by holding down button **"D"** until a dot lights up above the function button. The Key lock function locks all the hob's other functions, with the exception of the On/Off button **"A"**. The function remains on even after the hob is switched off and on again and can be deactivated by pressing button **"D"** again until the dot above the function button goes off.

RESIDUAL HEAT INDICATOR

H When the cooking zone is switched off, the residual heat indicator **"H"** remains on or flashes alternating with **"0"** until the temperature of the hob returns within safety levels.

IMPORTANT: The hob's safety features include an automatic switching off function. Prolonged use of the same heat setting triggers automatic switch-off of the cooking zone (for example, after around 1 hour at maximum heat setting, the cooking zone switches off).